

# BLE Locking Scandi Cylinder

Installation Guide v1.0



1

## Before you start

In the box:

1. 1x Scandi cylinder
  2. 1x Electronic knob
- \*2x CR2 Lithium battery



**Note:** Installation video can be found on our website at [blelocking.com](http://blelocking.com)

2


## Install the cylinder to the door

**Step 1:** While the door is open, remove the keyhole cover, the butterfly and the old cylinder.




Install the cylinder to the door

**Step 2:** Insert and secure the BLE Locking scandi cylinder.

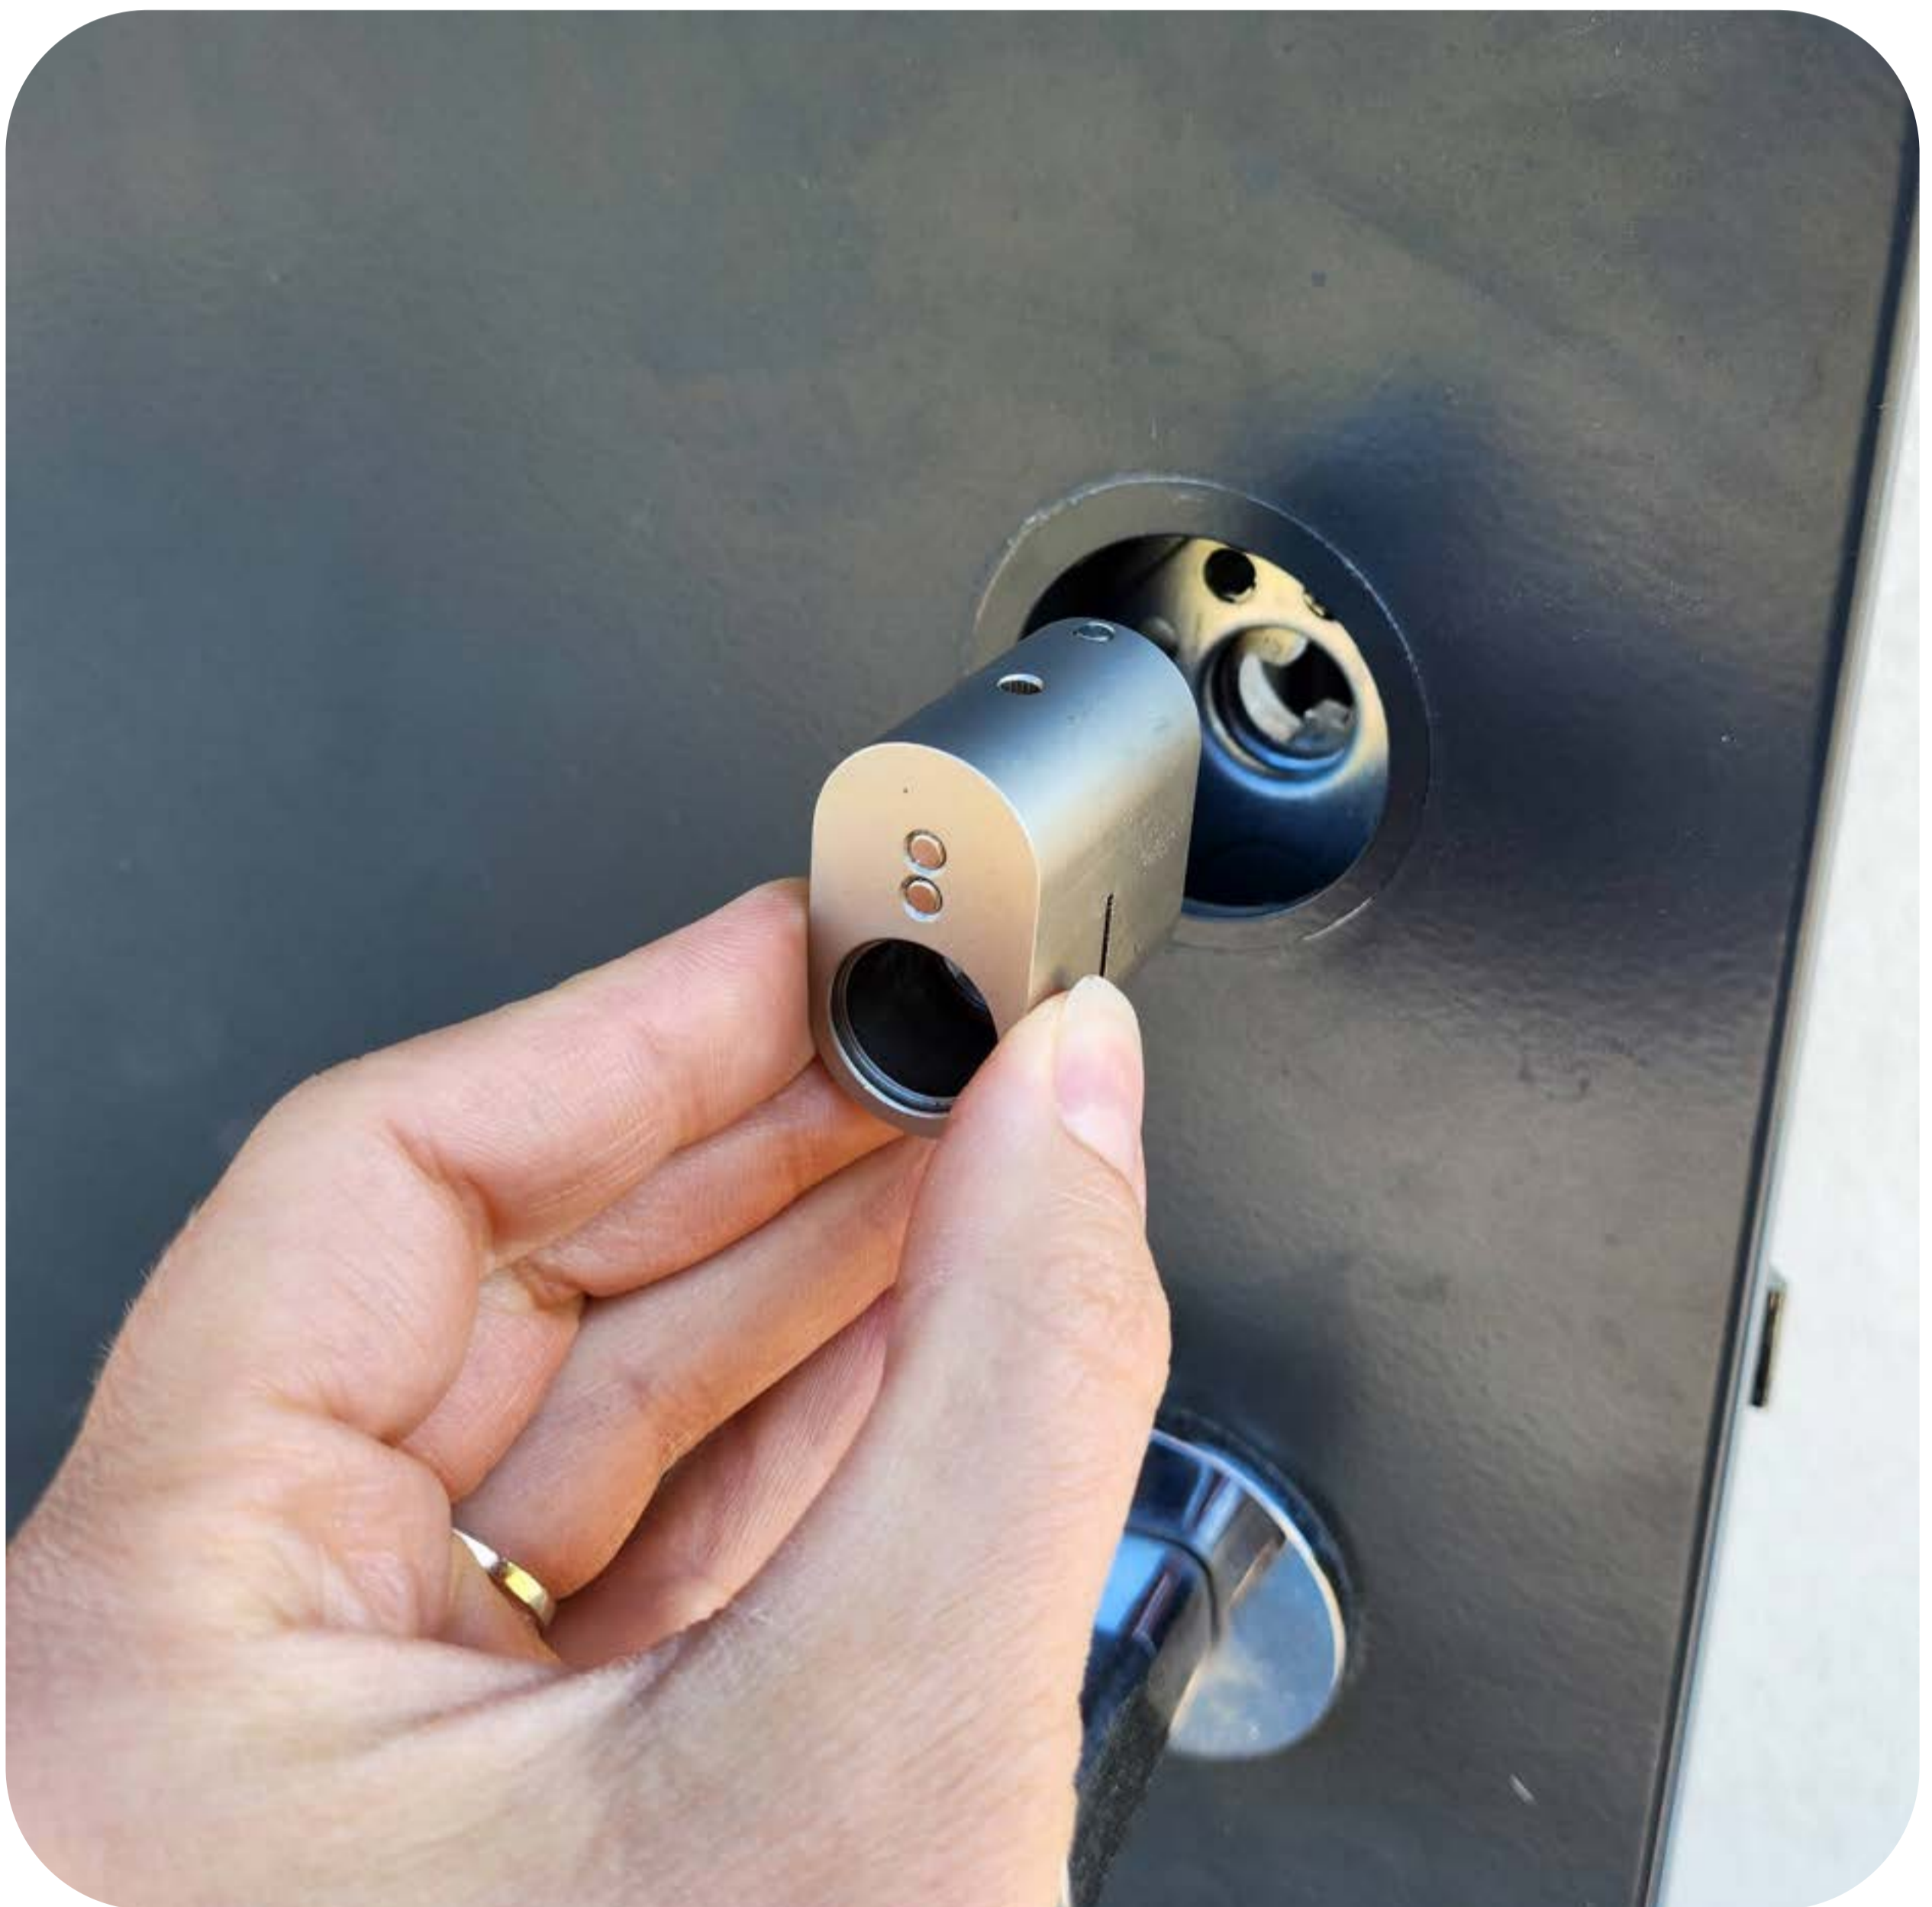


Install the cylinder to the door

**Step 3:** Install the keyhole cover on the outside and the butterfly on the inside of the door.

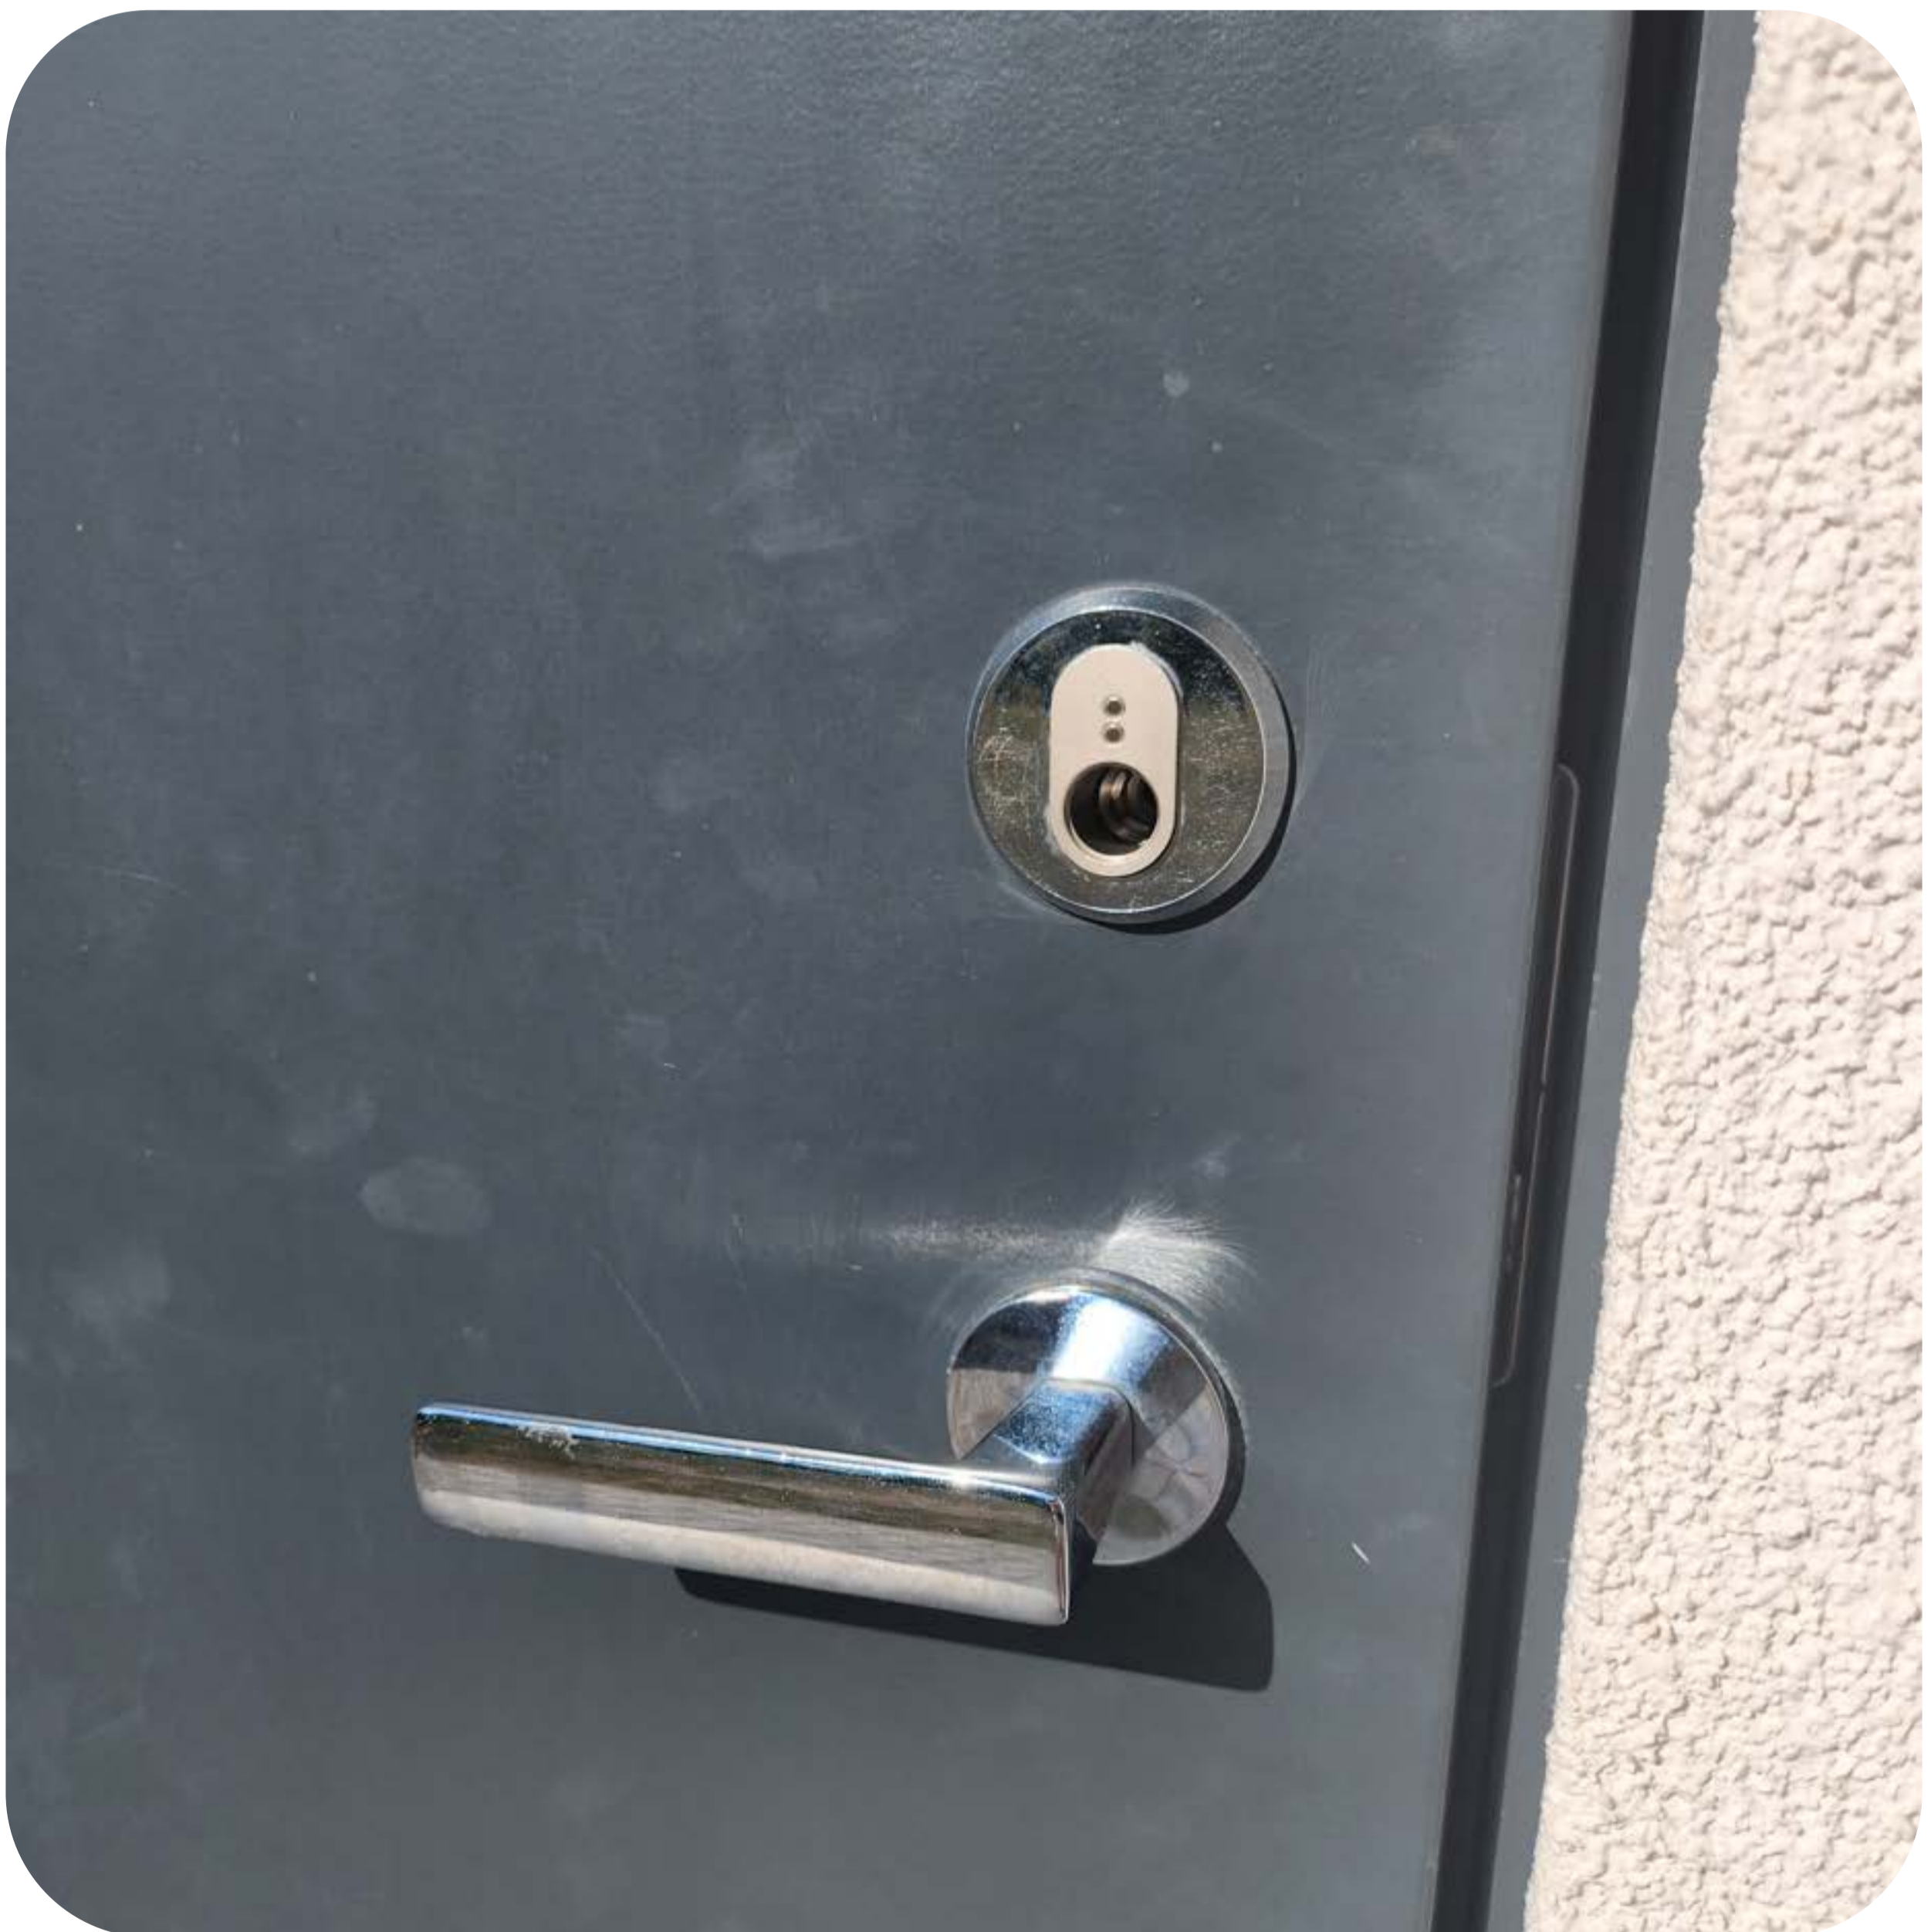

Install the cylinder to the door

**Step 4:** Attach the electronic doorknob to the outside of the door.

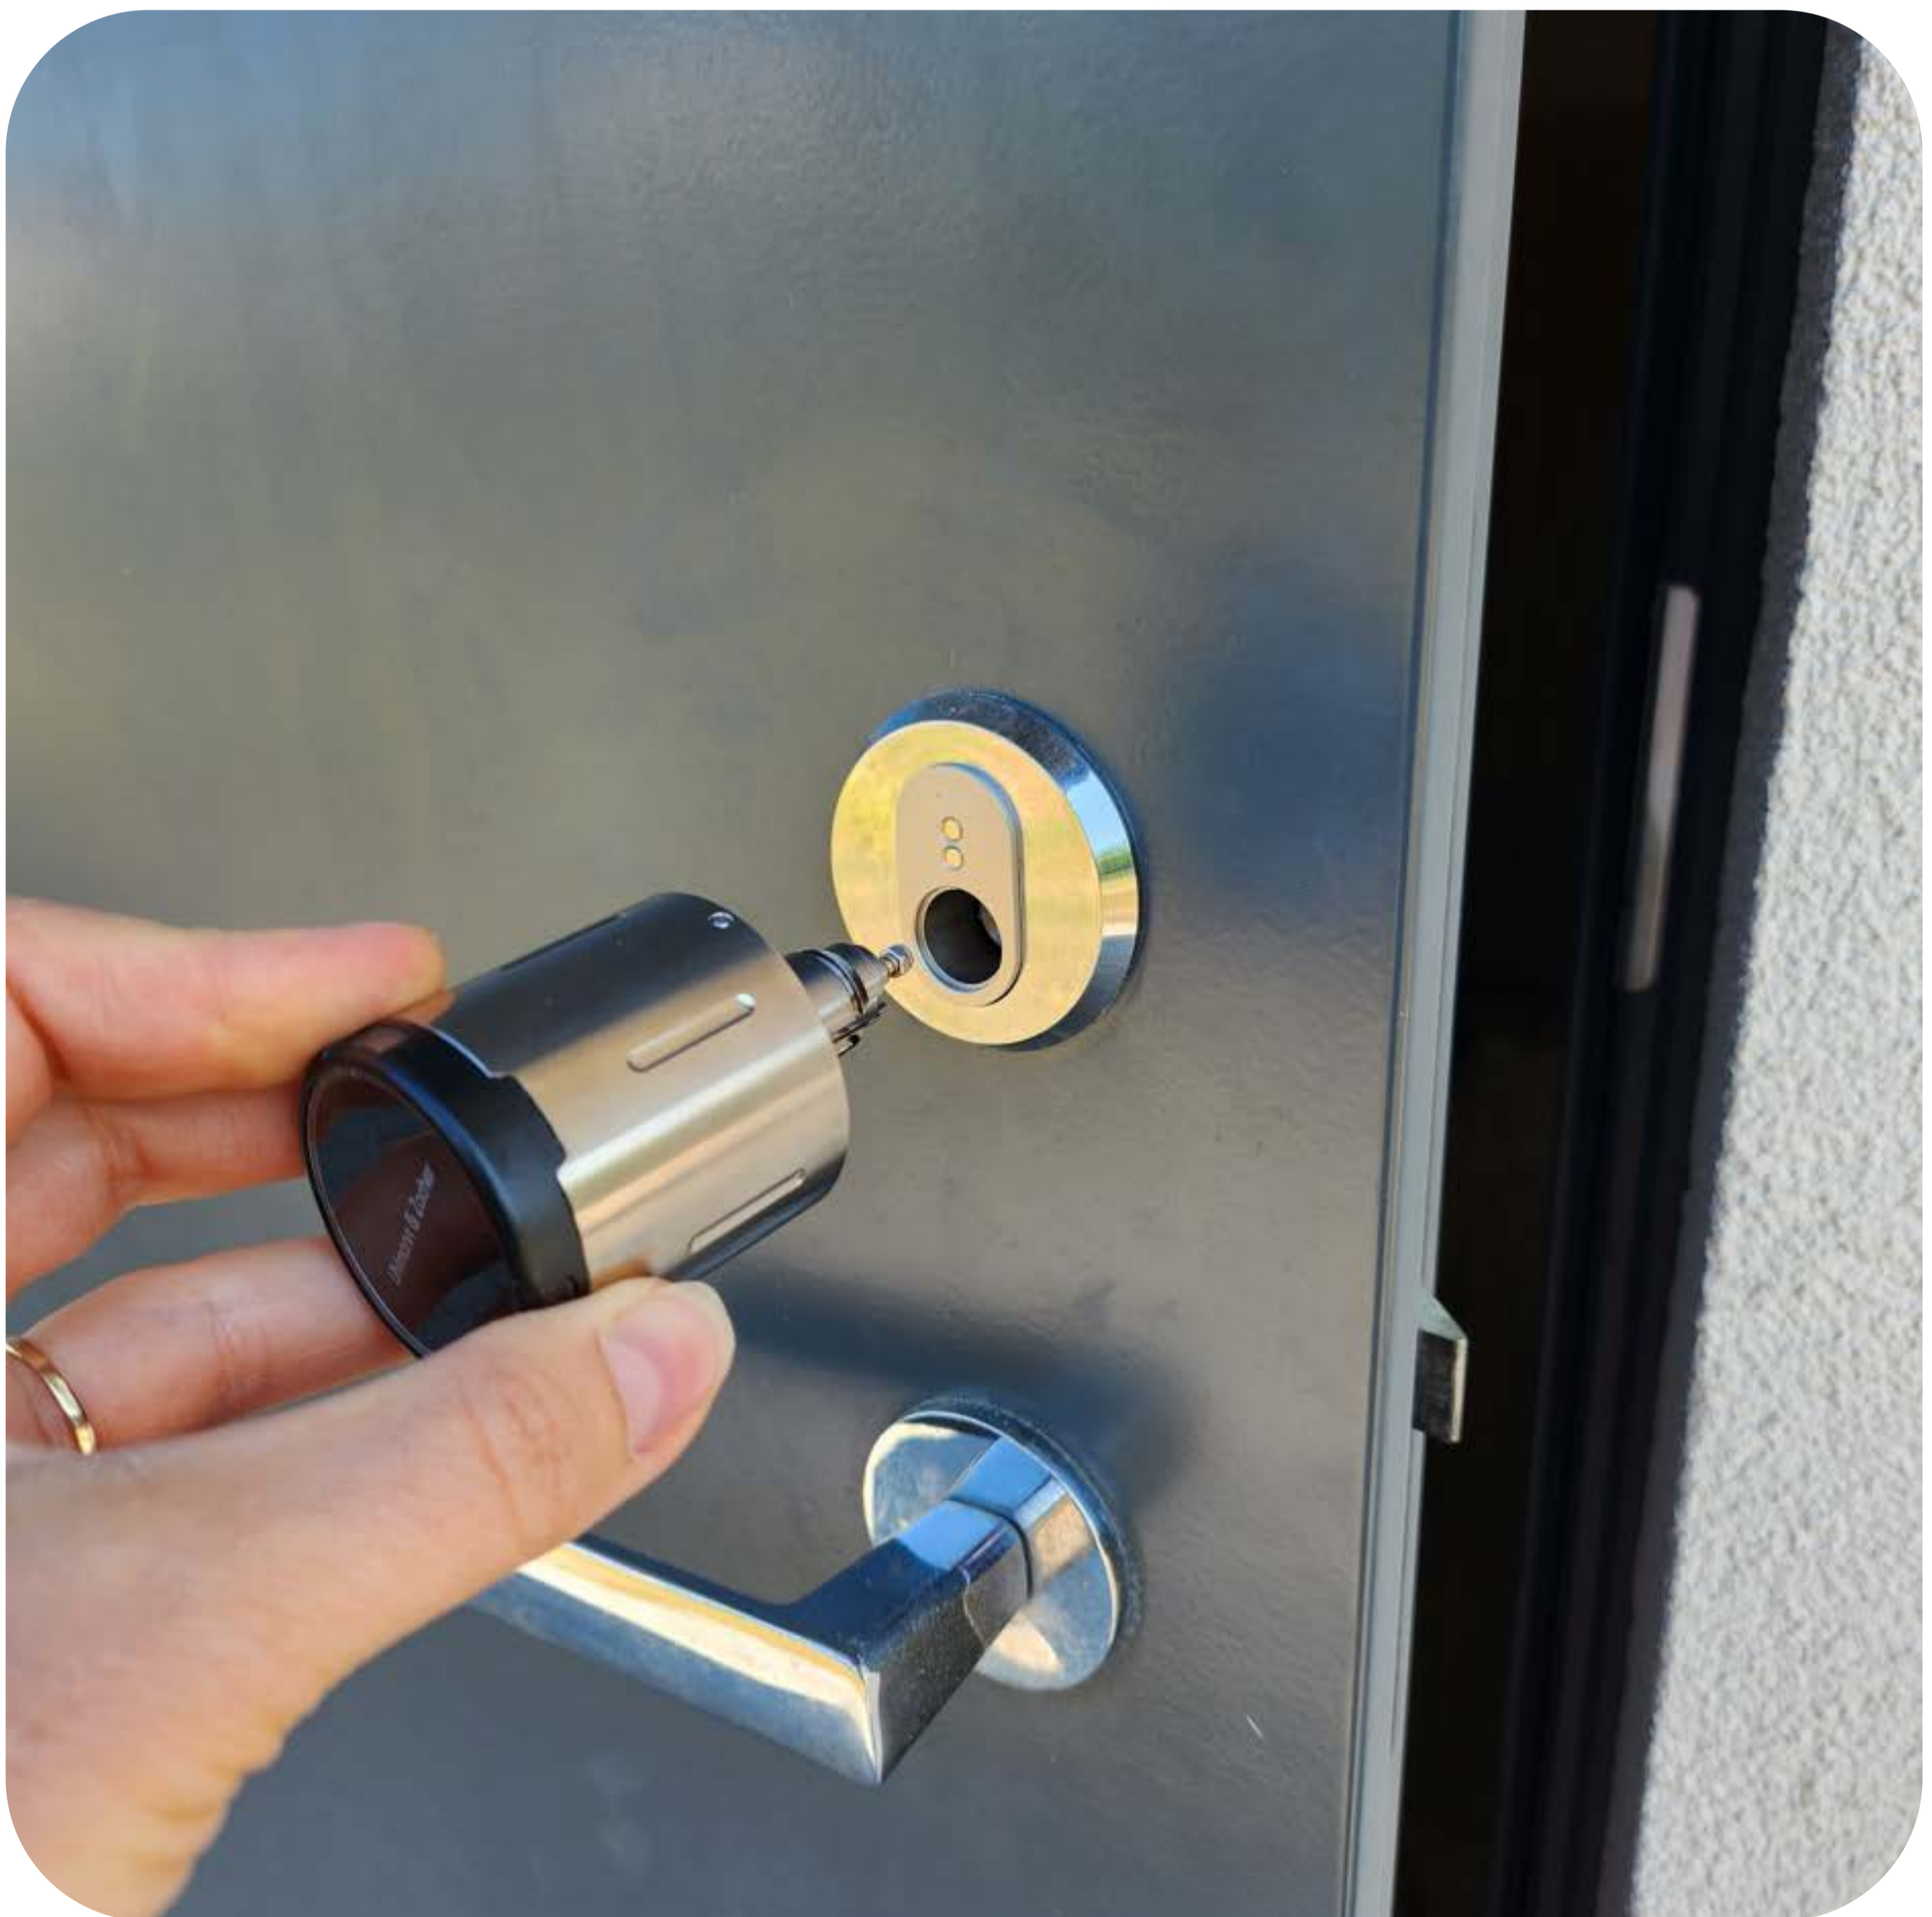

3

## Activate the Cylinder

**Step 1:** Download the **BLE Locking** app from the **App Store** (Apple) or **Google Play** (Android).



**BLE Locking**




**App Store**



**Google Play**

## Activate the Cylinder

**Step 2:** Tap **Get Started** to create an account in the app and log in.

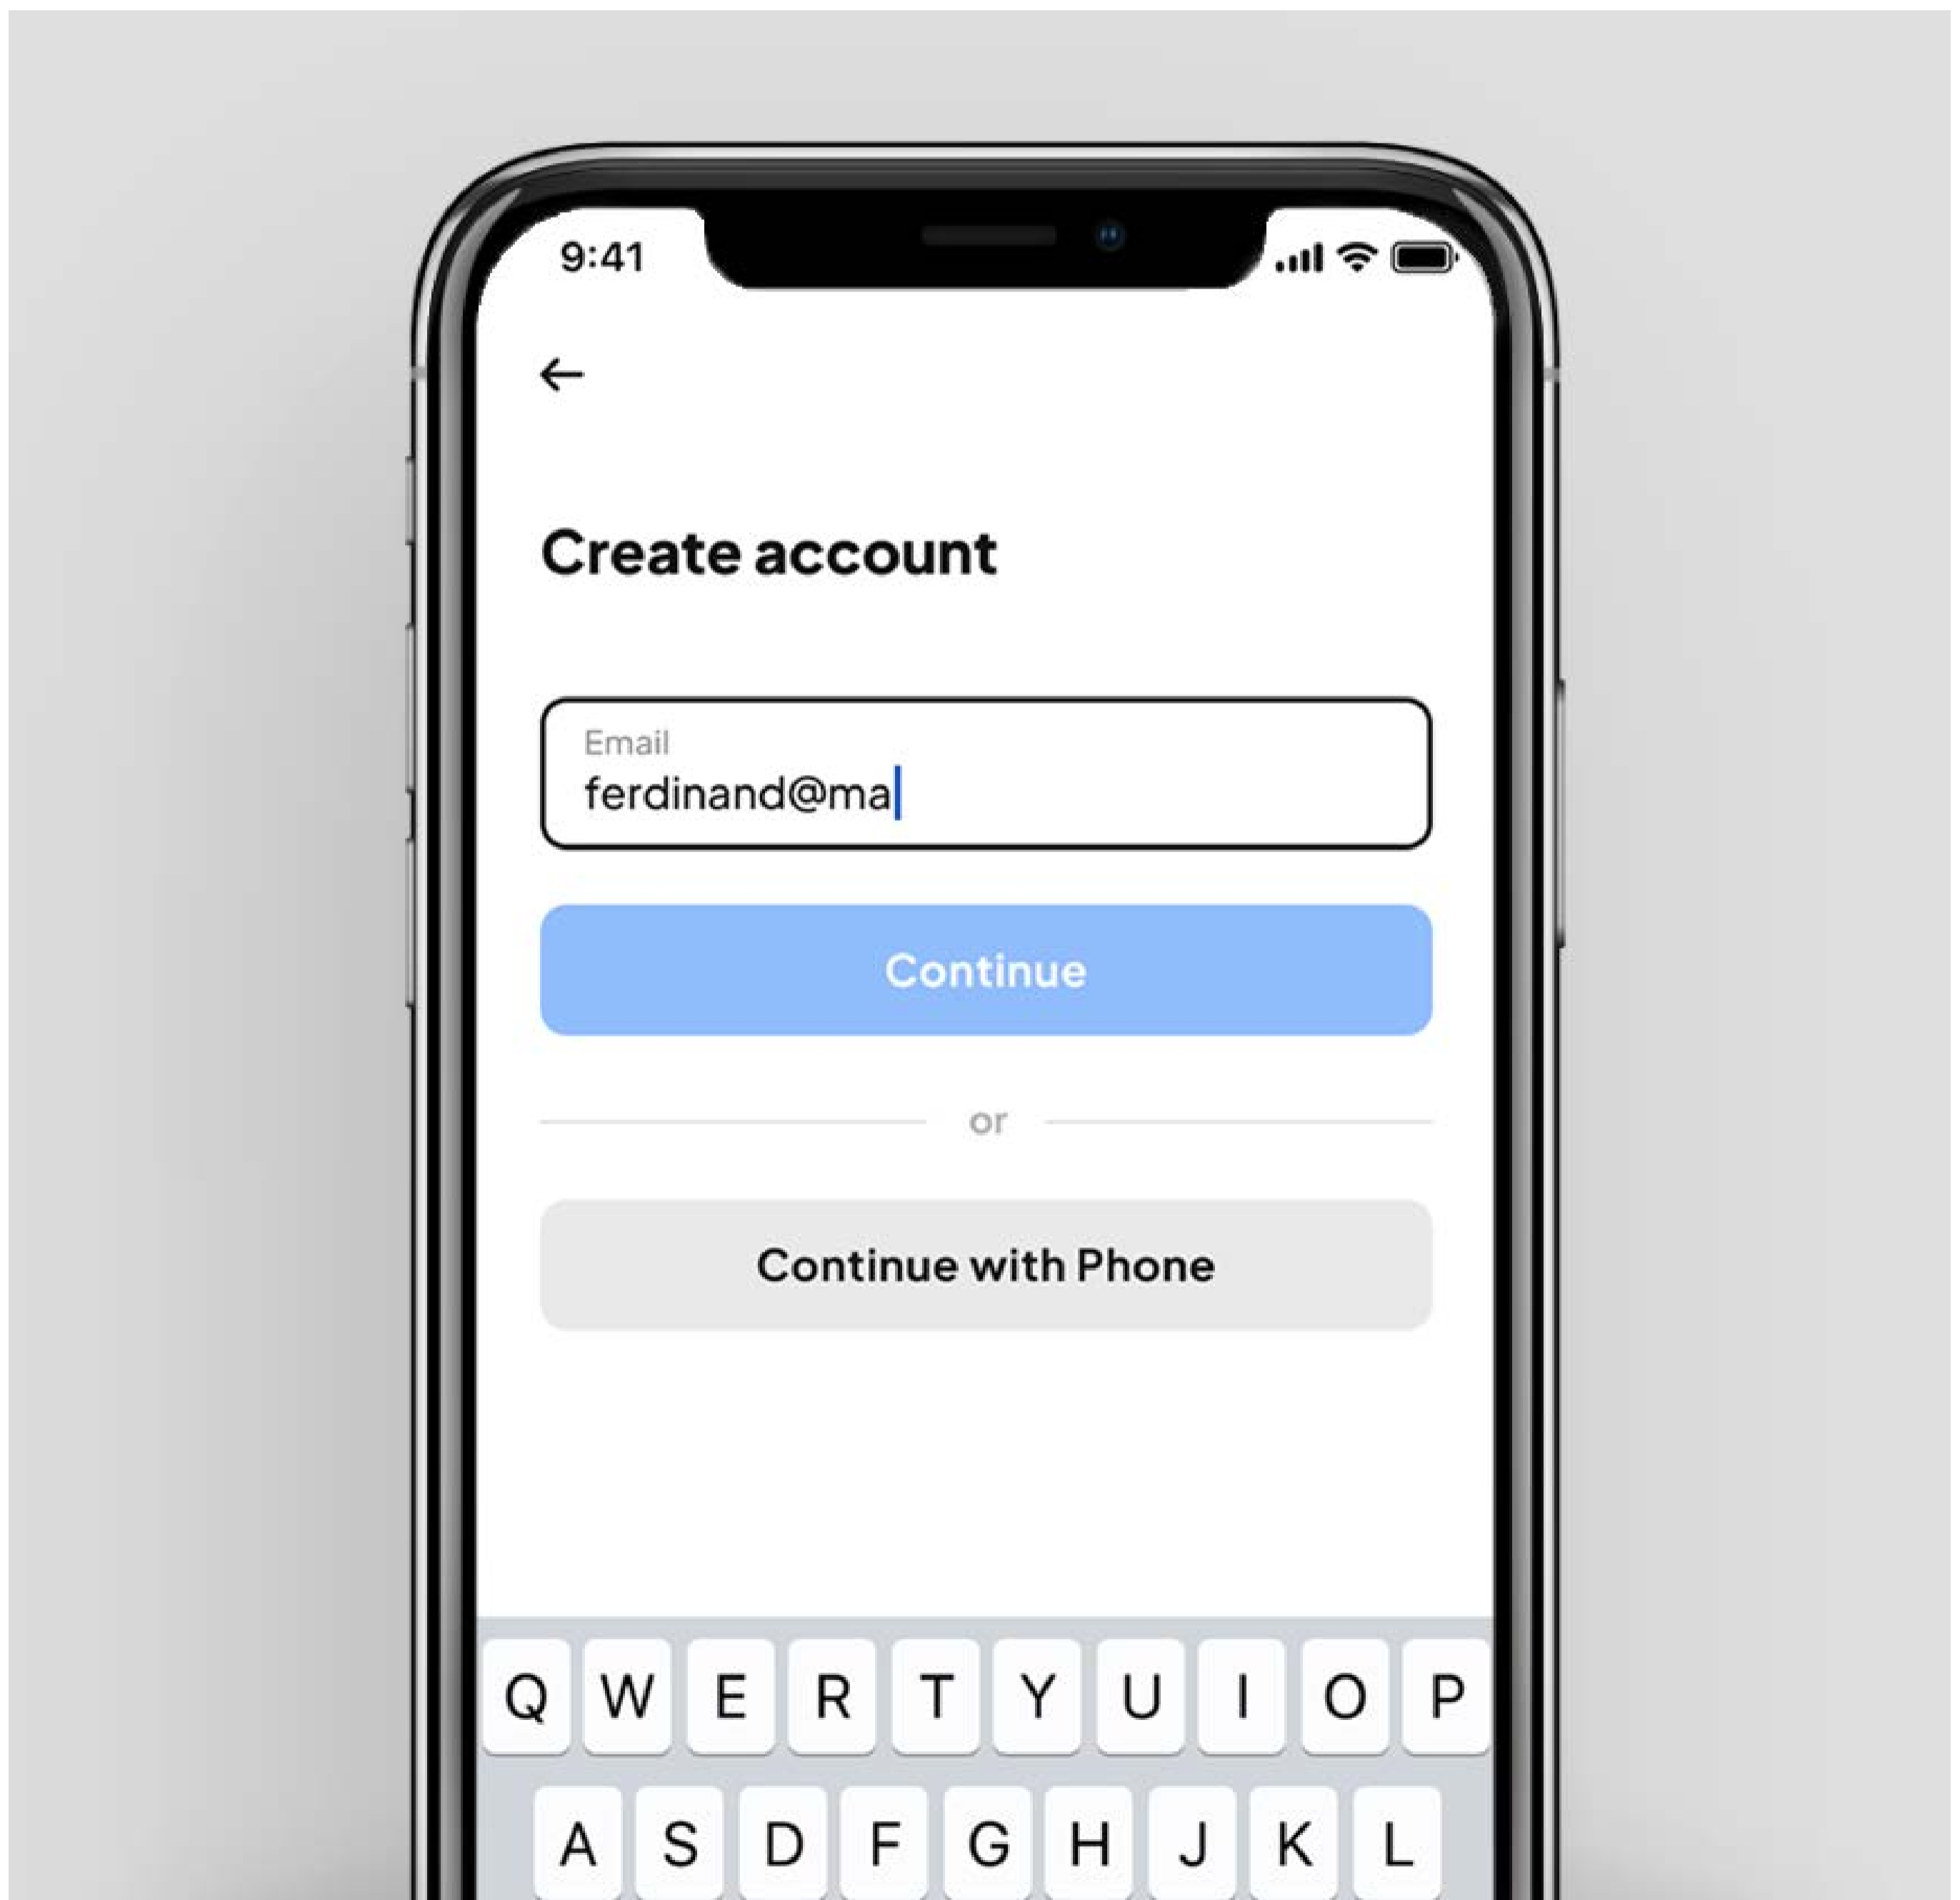




## Activate the Cylinder

**Step 3:** Tap **Add a lock module** and scan the QR-code that came with the Cylinder (the label with the QR-code is in the box - please keep it at hand).



## Activate the Cylinder

**Done:** You are ready to use your new cylinder. Tap the **lock button** in the app to activate the cylinder and try it out.

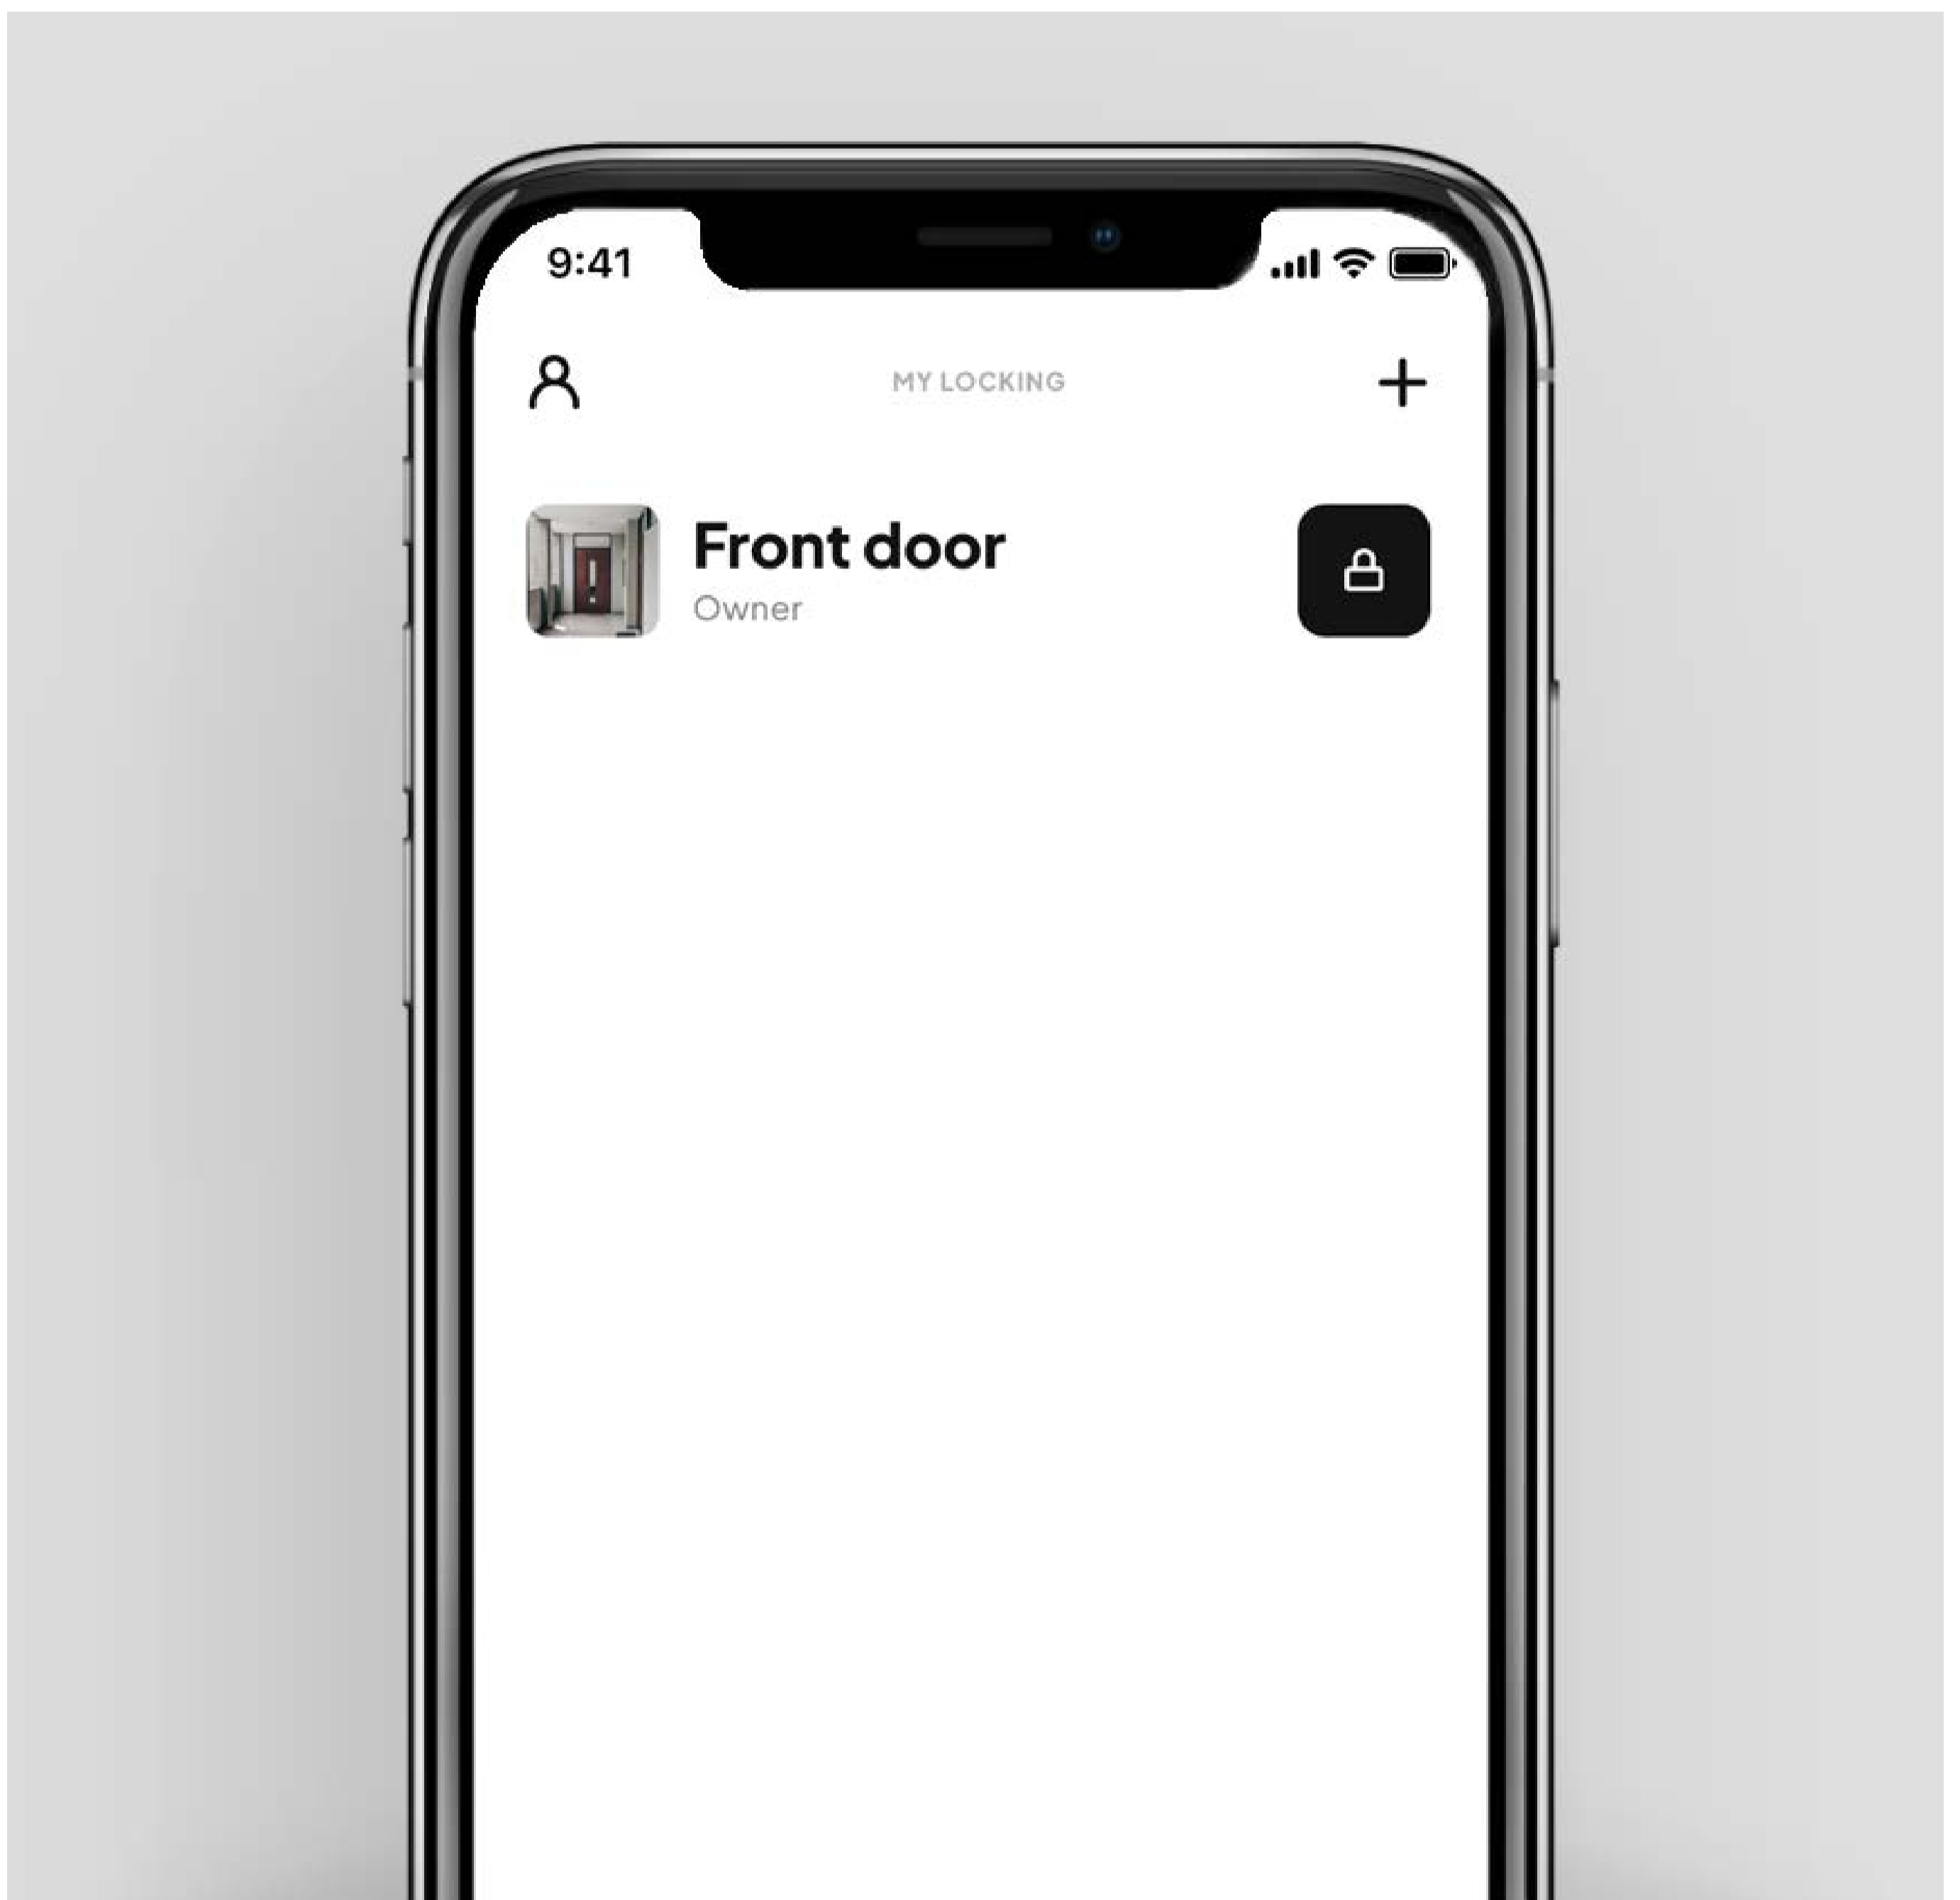

# How to use

## Operating/using the Cylinder

By default, the cylinder will be in secure mode and the electronic knob will spin freely without operating the door's lock.

### How to open the door using the BLE Locking app:


1. Log in to the BLE Locking mobile app.
2. Tap on the lock button in the app to activate the Cylinder.
3. Turn the knob to operate your door lock.
4. The cylinder is active for 10 seconds, after which it will enter secure mode.



**Note:** The time during which the cylinder is active can be changed in the app.

## How to remove the electronic knob?

1. Open your door.
2. In the BLE Locking app, tap on your lock.
3. Tap on “Detach electronic knob”.
4. Tap on “Enable mounting mode”.
5. Turn the knob slowly while pulling it - when the disassembly mode is activated, you have 10 seconds to remove the knob.

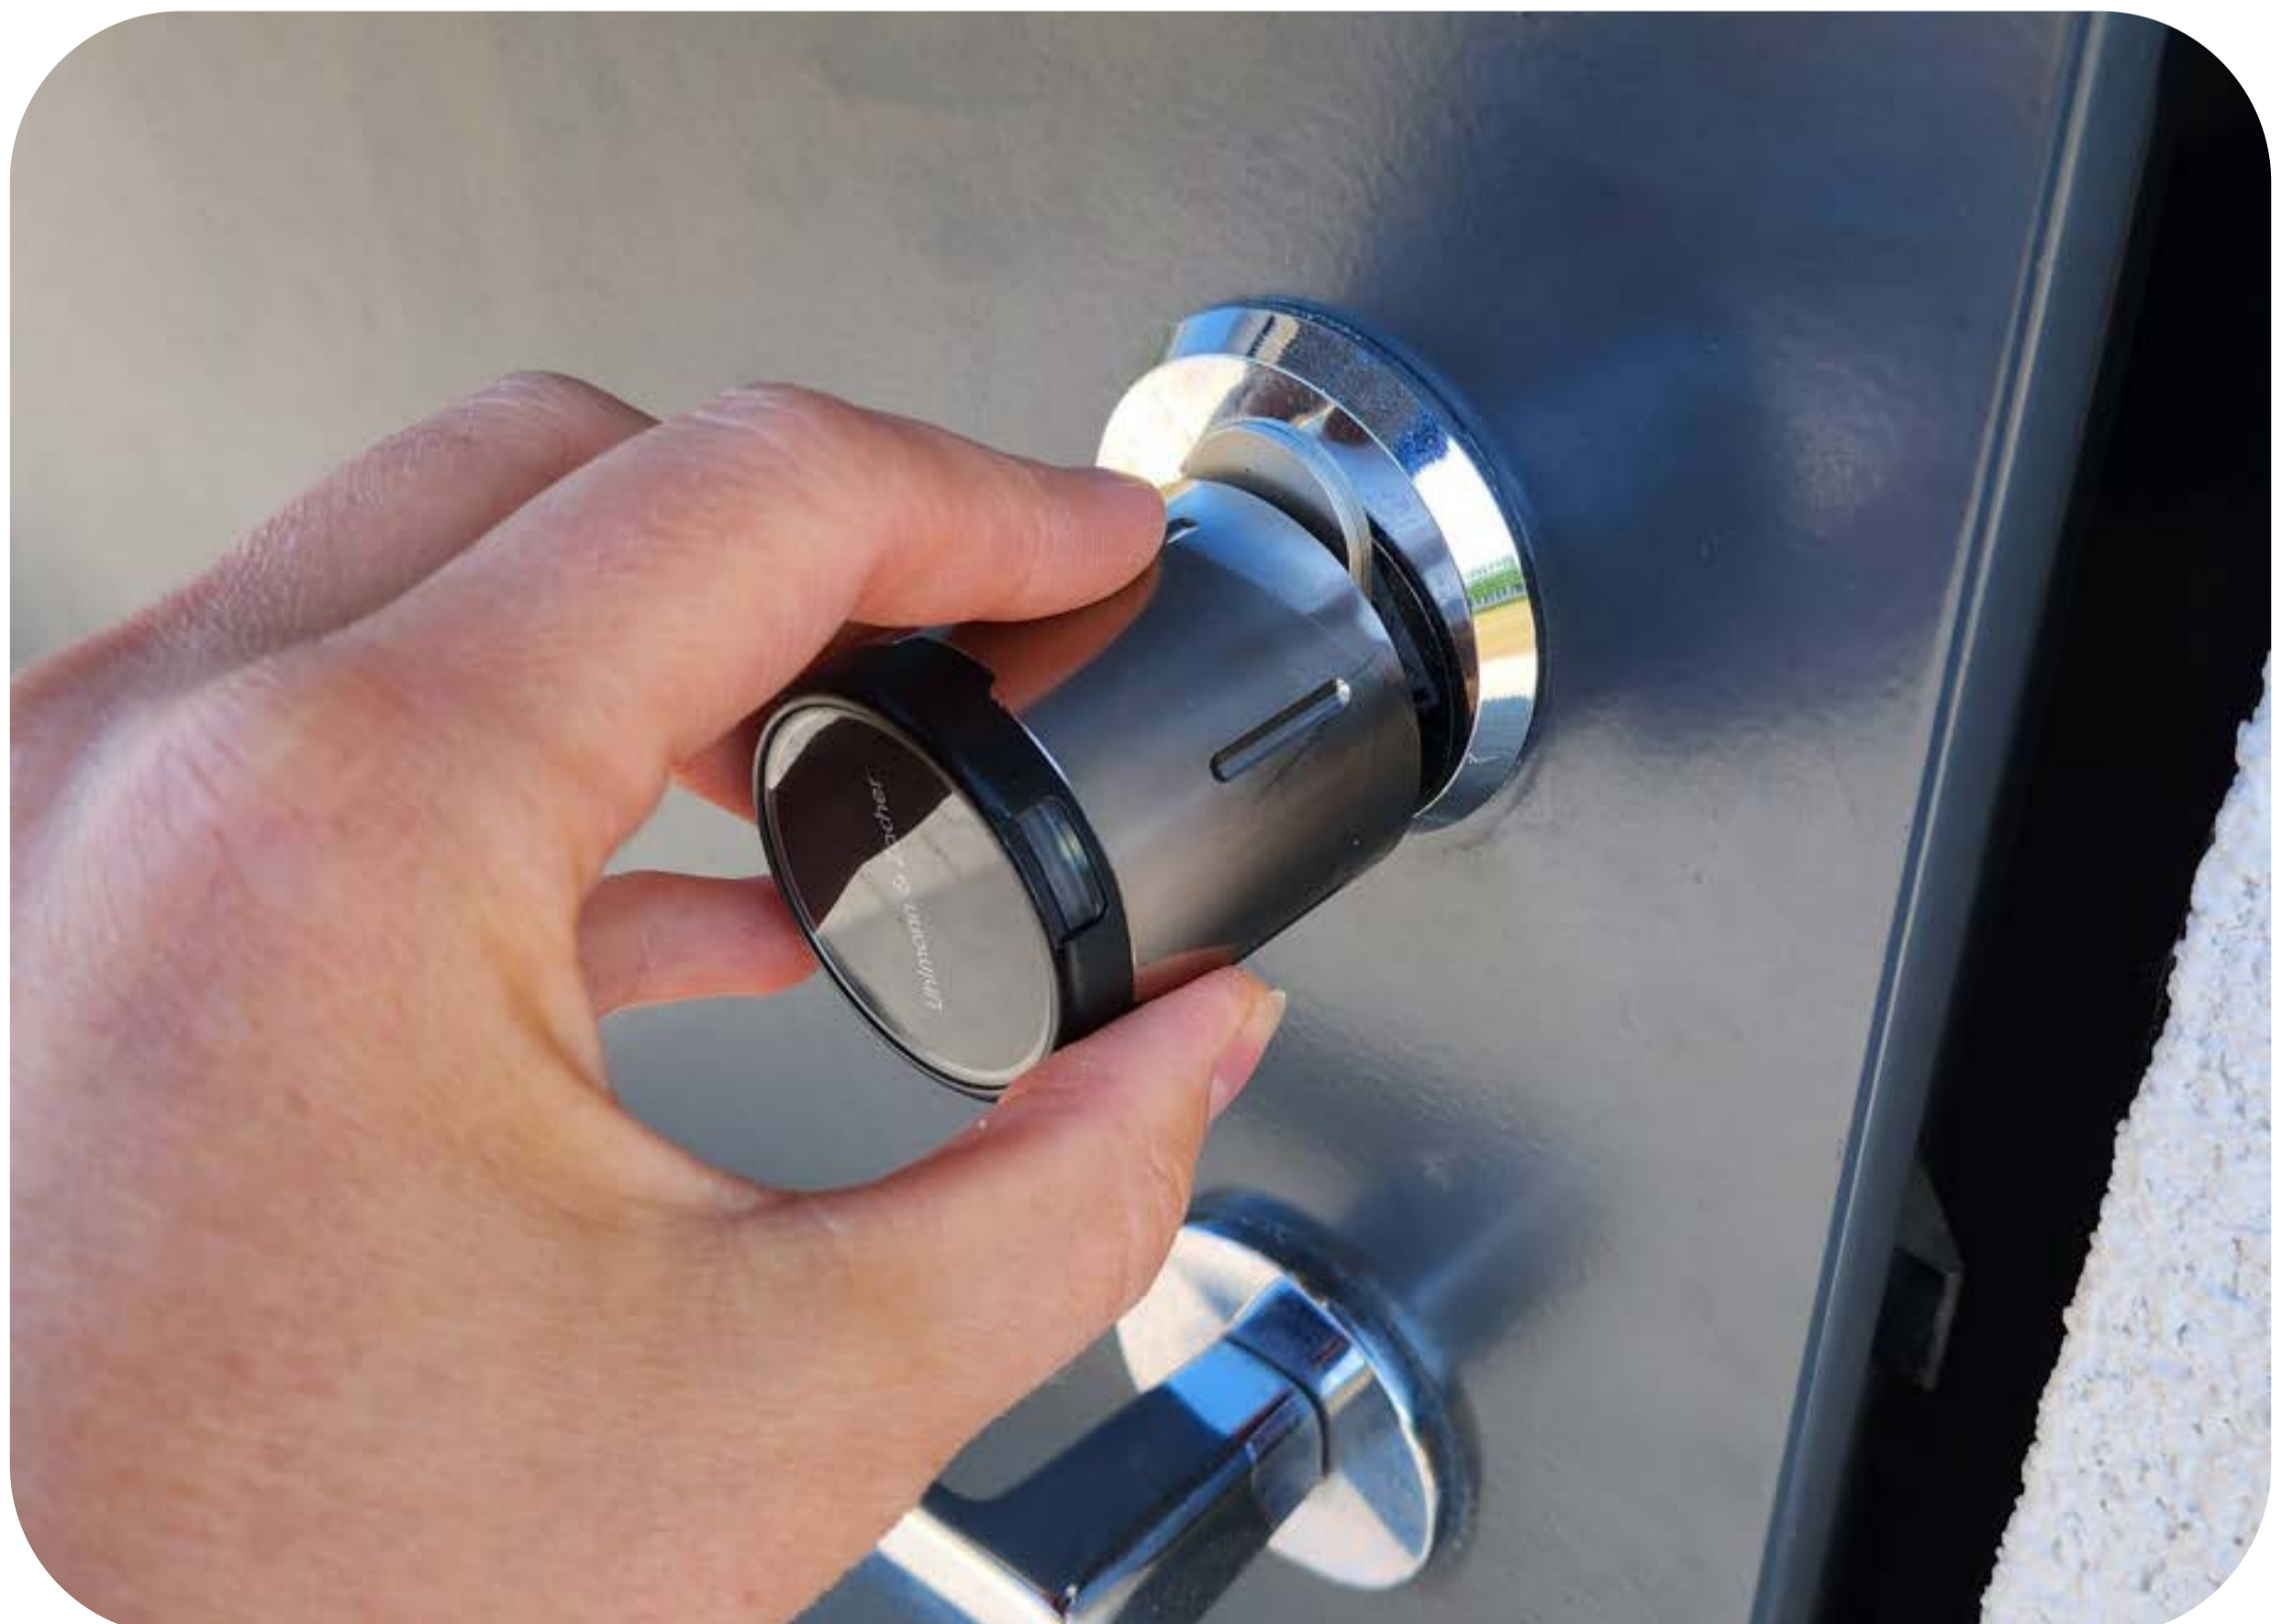

## How to remove the battery cover?

1. In the BLE Locking app, tap on your lock.
2. Tap on “Open battery cover”
3. Tap on “Open” - you now have 30 seconds to open the cover.
4. Press down the pins in the cover with a needle or a pen. While the pins are pressed down, remove the cover by pulling hard.
5. After replacing the batteries, press the “Open” button again and put the cover back while pressing down the pins.



## When do the batteries need replacing?


The batteries need to be replaced when you hear 5 consecutive beeps after activating the cylinder.

## What if the battery runs out?

In the case of the battery running out, remove the plastic logo disc with a suction cup and use 2 regular wires to connect a 9V battery to the pins that you see underneath the logo disc.



**Note:** Battery lasts for 2+ years and should be replaced as soon as you hear 5 beeps.

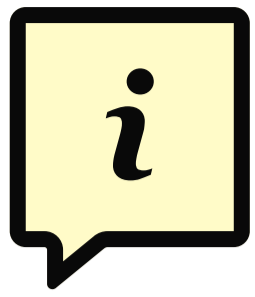

# Product details

Compatibility	Standard Euro lock opening Suitable for all door thicknesses
---------------	---

---

Material	Stainless steel
----------	-----------------

---

Colour options	Chrome Black Anthracite Gold Bronze
----------------	---

---

Power supply	2x CR2 lithium battery
--------------	------------------------

---

Communication protocols	BLE (Bluetooth Low Energy)
-------------------------	----------------------------

---

Operating temperature	+5°C to +55°C
-----------------------	---------------



we put our  in locking

Customer support  
[support@blelocking.com](mailto:support@blelocking.com)

Sales  
[sales@blelocking.com](mailto:sales@blelocking.com)

More information  
[blelocking.com](https://blelocking.com)

